

Infant protection:

Providing peace of mind

Babies are one of the most vulnerable patients in a hospital. Ensuring infant security is critical to not only the reputation of the hospital, but also to the peace of mind of everyone there, from nursing staff to new moms.


The effective infant protection solution provides accurate newborn location information along with 24/7 abduction attempt alerts.



STATIC
SYSTEMS
GROUP

Working in partnership with



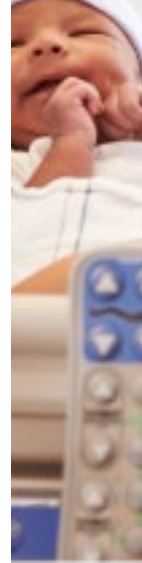

At a glance:

- Battery powered monitors transmit a unique room number which is received by any tag in the room.
- The tag communicates the room number and its own unique ID via RF to a location server which can be assessed in real-time by hospital personnel and integrated with third-party solution providers.
- Customisable, with rules based on individual healthcare facility requirements.
- Easily integrates with lift control systems, door locking systems and security cameras.
- Escalating system of alerts and security measures as infants approach exit doors or lift, including disabling of lifts and locking of doors.
- Tags feature a tamper sensor and will send alerts and alarms if the band is cut.
- Analytical reports are generated showing infant movement, alarms generated and prevented abductions.

Proven RFID solutions offer the most advanced infant security solution. Designed to enhance the safety of infants in obstetric and paediatric departments.



Working in partnership with




Core Outcomes

- Prevents abductions to keep infants safe.
- Ensures baby is always properly matched with the correct mother.
- Peace of mind for moms and hospital staff.



Working in partnership with

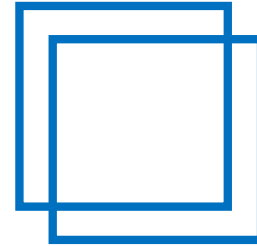



Find out more

Visit website: [Static Systems Group](#)

[CenTrak](#)

E-mail: marketing@staticsystems.co.uk



In line with our company policy of continuous product development, we reserve the right to change design and improve specification without prior notice.